
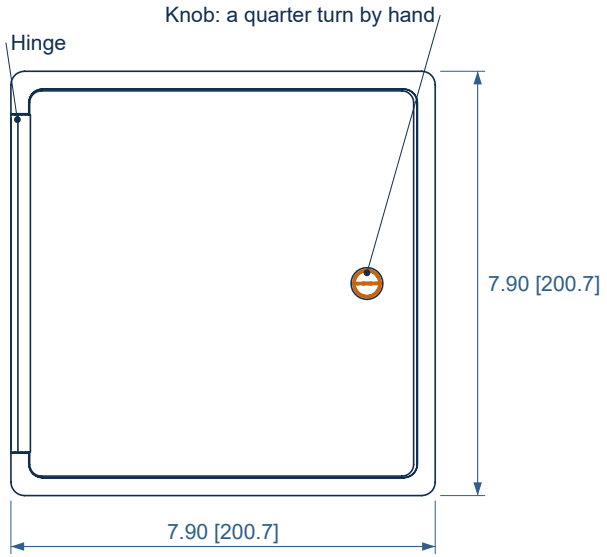


FRONT

Room side, door closed

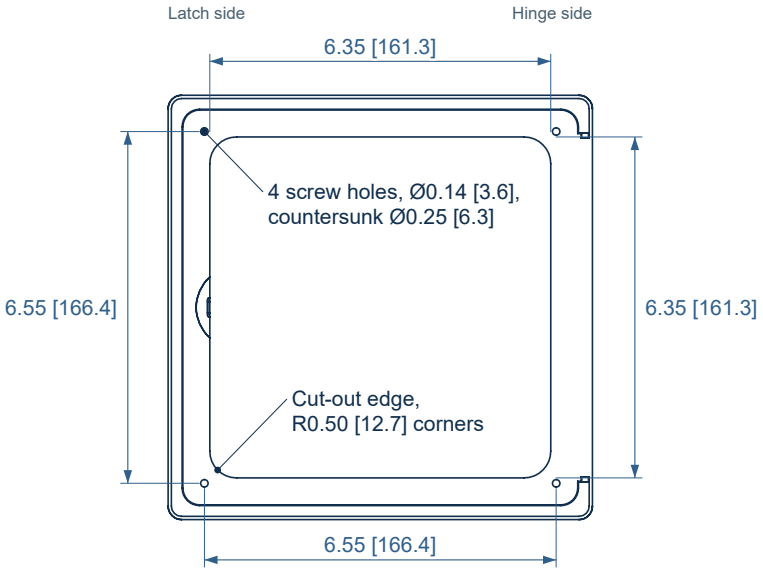


FRAME FROM THE WALL SIDE

Cut-out and screw holes



EDGE

Seen from below, at twice the scale of the front

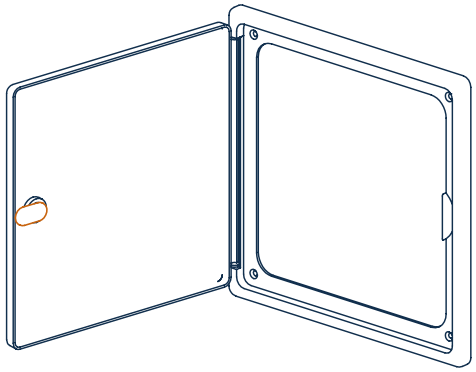

3D VIEW, DOOR OPEN

NOTES

1. Cut the wall opening 6.35 × 6.35 in with 0.5 in rounded corners: the same as the opening through the frame. Trace the cut-out template, printed at actual size.
2. The frame sits on the wall surface; nothing goes into the wall. Open the door and fix the frame with the 4 screws supplied, through the holes under the door.
3. To open, turn the knob a quarter turn by hand: the latch cam behind the door turns with it. The door is shown closed; the knob and cam are drawn in orange.
4. Dimensions in inches [millimetres]. Views are not to scale.
5. Drawn by Buy Access Panels from the manufacturer's CAD. Not a manufacturer-certified drawing.

Easy-Exs PAD0808

8x8 in Plastic Drywall Access Panel with Hinged Door

SOLD AS 8 × 8 in	**SERVICE OPENING** 6.35 × 6.35 in
CUT-OUT 6.35 × 6.35 in, R0.5	**SCREWS** 4, supplied
SOURCE Manufacturer's CAD	**DRAWN** 2026-11-13

buyaccesspanels.com

Not to scale