

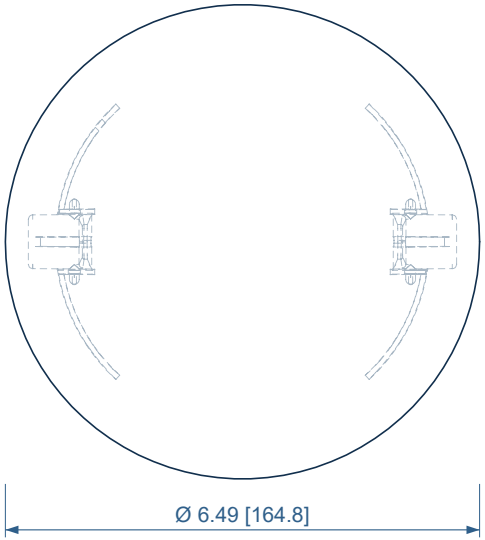



FRONT
Room side

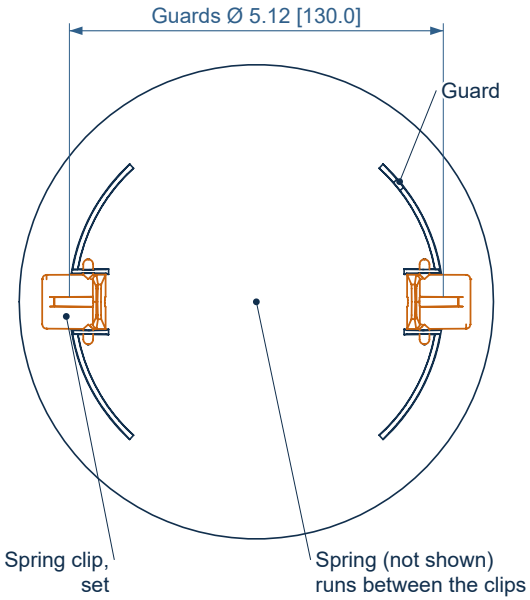

BACK
Inside the wall

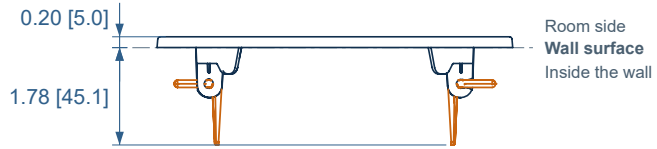

EDGE
Seen from below, at 3/4 of the scale of the front and back

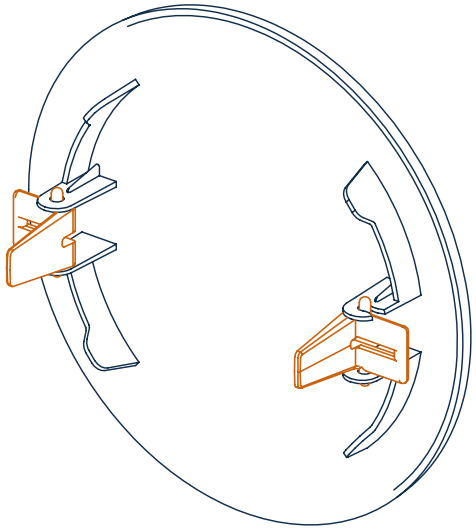

BACK, 3D VIEW

NOTES

1. Cut a round hole 5.5 in across, in drywall up to 5/8 in thick. Do not cut it to the cover size.
2. The back of the cover passes through a hole down to about 5.12 [130.0] across (its guards). Smallest hole about 5.25 in (estimated).
3. Clips shown set (standing), as they go into the hole. Fitted, the spring turns them flat behind the drywall. The spring is not shown.
4. Dimensions in inches [millimetres]. Views are not to scale.
5. Drawn by Buy Access Panels from the manufacturer's CAD. Not a manufacturer-certified drawing. Follow the instructions supplied with your panel.

Easy-Exs PAP65

Access Panel Round 5.5 in Click-Fit (Outside Dimension 6.5 in) Plastic White

COVER 6.5 in round	**CUT HOLE** 5.5 in across
DRYWALL Up to 5/8 in	**UNITS** in [mm]
SOURCE Manufacturer's CAD	**DRAWN** 2026-11-19

buyaccesspanels.com

Not to scale